



comfort | excellence  
Carrier InterAmerica Corp



Confíe en los Expertos



### FICHA TECNICA CARRIER AIR CURTAIN




#### TECHNICAL PARAMETER

Model No.	Power (W)			Air Speed (m/s)			Air Volume (m <sup>3</sup> /h)	Noise (dB / A)			Net Weight (kg)
	HI	MED	LOW	HI	MED	LOW		HI	MED	LOW	
70NH1023RFA	320	230	200	15	12.5	10	1020	53	52	50	14.8
70NH1443RFA	410	360	320				1360	54	53	51	18.7
70NH1753RFA	520	460	410				1700	56	54	53	23.6
70NH2063RFA	620	520	430	15	12.5	10	2040	57	55	53	27.8
70NH1021RFA	320	230	200				1020	53	52	50	14.8
70NH1441RFA	410	360	320				1360	54	53	51	18.7
70NH1751RFA	520	460	410	15	12.5	10	1700	56	54	53	23.6
70NH2061RFA	620	520	430				2040	57	55	53	27.8

NOTE: Rated voltage and frequency are stated as per rating label.

#### WIRING DIAGRAM

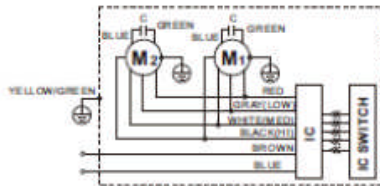

#### MAINTENANCE PRECAUTIONS

1. First, ensure that the air curtain is switched off.
2. Never use petrol, benzene, thinner or any other such chemicals for cleaning the air curtain.
3. Do not allow water to contact electrical parts such as motor or switch.
4. Do not immerse impeller and other plastic parts in hot water over 60°C.

#### WARNING

If the product is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



### OPERATING INSTRUCTIONS

#### CENTRIFUGAL TYPE AIR CURTAIN



Before using this unit, please read these instructions completely.

